


aScan USER MANUAL




Getting to know aScan

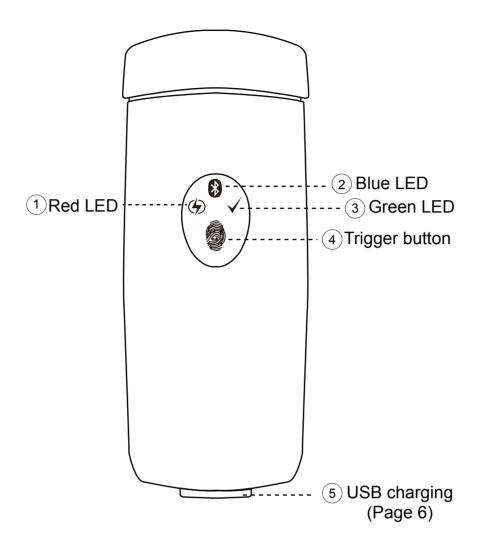

LED status

| Status |
|---|
| Steady:charging Flashing:low battery |
| Flashing 1 time:paring in progress Flashing 2 times:paring success Flashing 3 times:ready for paring |
| Flashing 1 time:successful scan (Hold trigger button for 2 seconds) Fast flash:battery is fully charged Slow flash:battery is at 70% |
| |

Start

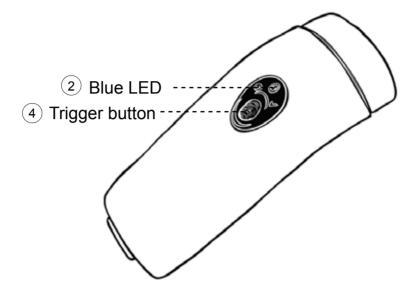

-Turn on

To turn on aScan,press Trigger button 4 once and hear a long beep followed by two short beeps

-Turn off

To turn off aScan hold down the trigger button for 6 seconds until all LEDs are off.

-First time use


If using aScan for the first time aScan will be in search mode and the Blue LED \ will flash 3 times every one second.

-aScan Already paired

If aScan has already paired with an iOS device the Blue LED will flash 2 times every one second.

Pairing

On your iOS device, turn Bluetooth on under Settings to search for aScan.

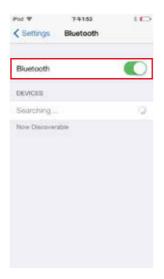

Once aScan is shown on the screen select aScan to begin paring. During the pairing process the Blue LED ③ on aScan will flash once every 3 seconds





When pairing is complete the status on your iOS device will change from Not Paired to Connected



Test

Once the pairing process is completed you are ready to scan barcode into an aScan compatible APP. (You may download our free demo APP "Command Center" to test your aScan.

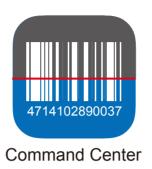


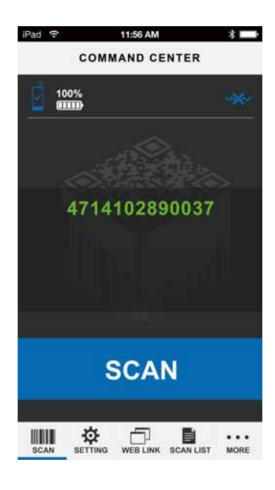

Download Command Center APP here:

https://itunes.apple.com/ca/app/command-center/id408582055

Battery&charging

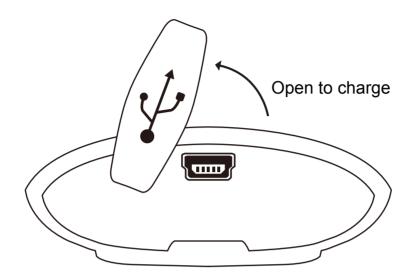

To conserve battery's power aScan will turn off after 3 minutes if aScan cannot establish a connection with a device.


If aScan is paired with a device, aScan will turn off after idling for 15 minutes.

To charge aScan battery please use a Micro USB charging cable(included in the package). The battery takes approximately 2 hours to be fully charged.

Delete aScan Bluetooth Pairing

If aScan is paired with an iOS device, you should delete aScan Bluetooth pairing before trying to pair with a different iOS device.

On your iOS device go to Settings, select Bluetooth, select arrow next to aScan and select Forget this Device. This will complete the unpairing process

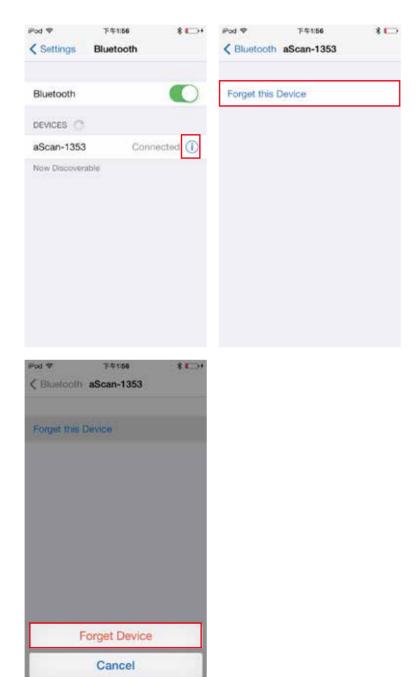

Notice!

You may experience extended pairing time trying to pair aScan with a new iOS device without first deleting its current Bluetooth pairing.

